
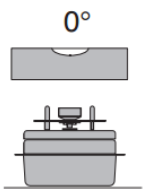


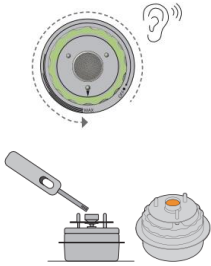


## USING ECO-SERVE

STEP	INSTRUCTIONS	VISUAL
1	Take a filled Eco-burner and place on a level surface in a well ventilated area.	
2	Turn the control dial fully anti-clockwise and carefully light the burner head.	
3	Once the head glows orange, turn the control dial clockwise until you hear the gas shut-off, then turn back clockwise slightly to find the lowest setting.	
4	Slide the lit eco-burner into the Eco-serve holder as shown in the picture. Ensure the rectangular clip above the dial is facing your hand when inserting it.	
5	Always ensure there is direct contact with food or liquid in your EcoServe bowl to prevent heat shock and cracking of the dish.	
6	<b>To TURN OFF the Eco-burner</b> – Remove the eco-burner from the holder and rotate the Control Dial fully clockwise until no gas is flowing.	